


EnergyCam / EnergyCam 2.0 Quick Start Guide for firmware update

1. Updating by using a Windows PC

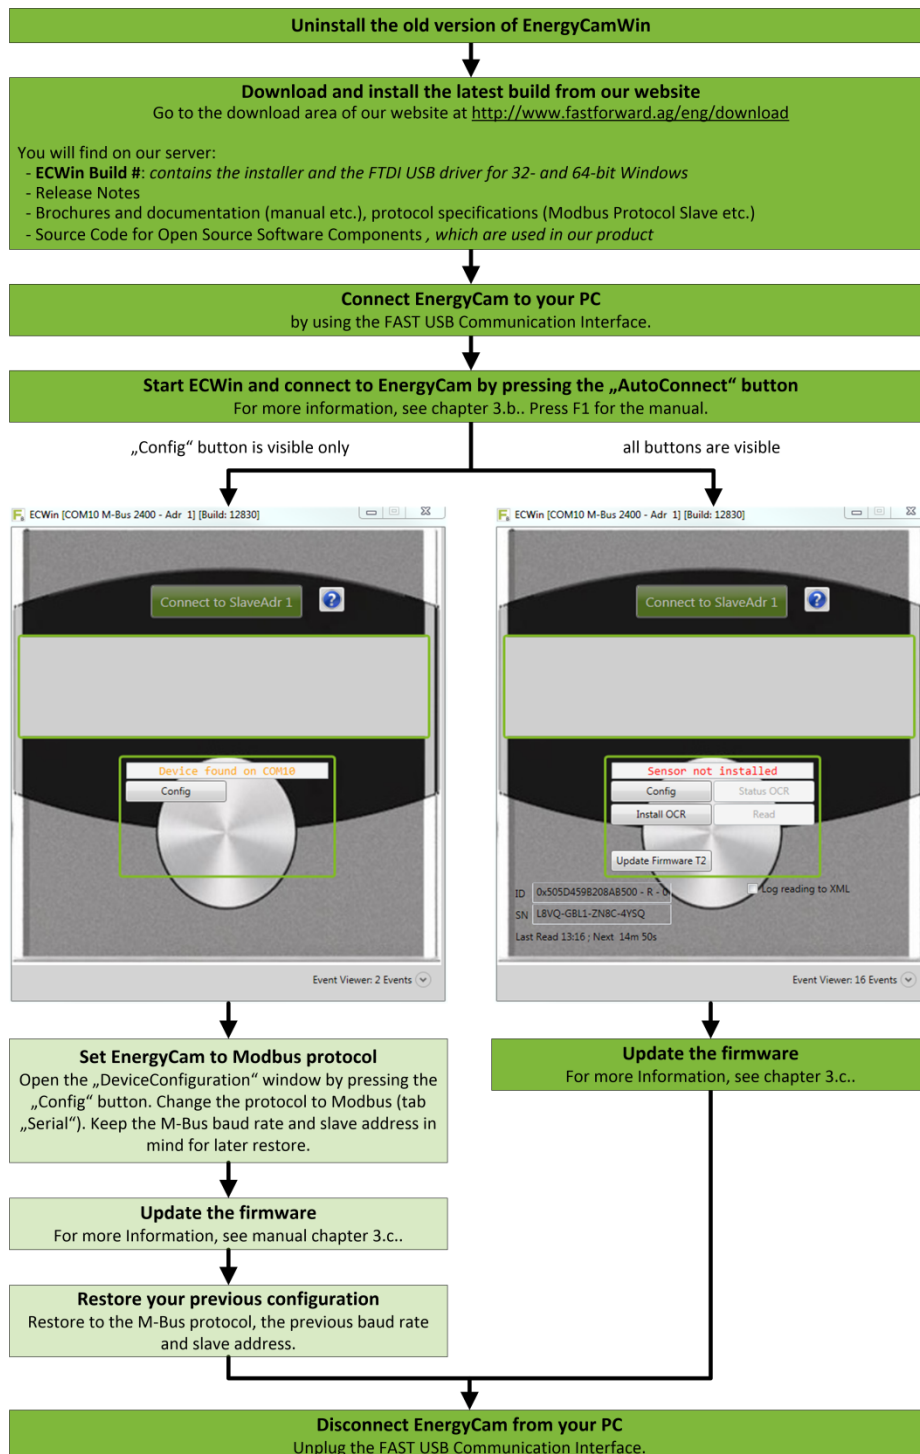

2. Updating by using an Raspberry Pi or other embedded systems

At <https://github.com/ffcrge/ecpi> you will find a sample implementation of the firmware update protocol and the latest binary.